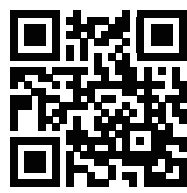


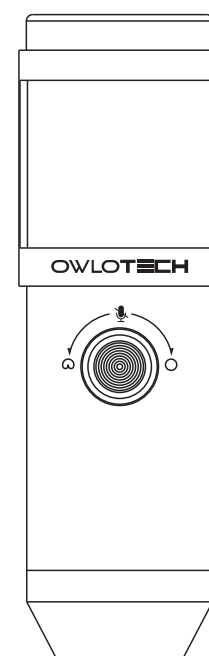
A6騎馬釘

Size: 148x105mm



More Information at
www.owlotech.com

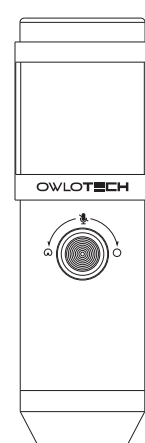
OWLOTECH



X2 Streaming Microphone

MANUAL

EN



How to Rotate the knob to adjust working pattern

Middle
Mute with Red LED effects

From middle to left
Cardioid with Green LED light effects

From middle to right
Omnidirectional with Blue Led light effects

Please be aware the knob is only for patterns, unable to adjust volume output level or sensitivity level.

Get best pickup effects

In order to get best pickup effects, please select appropriate recording pattern for different occasions:

Recording Pattern	Occasions			
Cardioid	Streaming	Podcasts	Voiceover	Instruments
Omnidirectional	Conference	Events		

Sensitivity and output volume level

Sensitivity and output volume level can be adjusted from PC, Control panel> sound for Windows device
System preference> sound for Mac device

EN

Setup For Windows OS

1. Use the provided USB cable and Plug the microphone into a USB port on your computer directly
 2. Open the control panel from Start Menu
 3. Select Hardware and Sound from the control panel
 4. Select Manage audio devices from Hardware and Sound menu, and select Owlotech X2 Streaming as default device.
 5. Select the recording tab, and select Owlotech X2 Streaming as default device. (Notice: Open the Owlotech X2 Streaming property under recording tab, Please adjust Gain level under Level tab when it is needed.)
- Select Playback tab, and set Owlotech X2 Streaming as default device
Then Open properties, and set 0-latency recording monitor on Level tab.

Setup For Mac OS

1. Open system preferences
 2. Select Sound from sound preferences
 3. Select Owlotech X2 Streaming on input tab
 4. Adjust Gain Level from MAC
 5. Select Owlotech X2 Streaming as default output device
- (Notice: For Owlotech X2 Streaming, the other APP is needed, such as garageband, if user need to achieve software monitor recording.)

FAQ

Microphone doesn't work

1. Please use the provided cable or other high quality cable to connect (Inferior cable will affect the performance, and the microphone will not work at worst case);
2. Please make sure the cable plug is fully inserted into microphone
3. Please make sure the microphone is default recording device

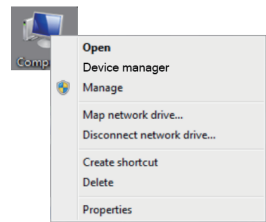
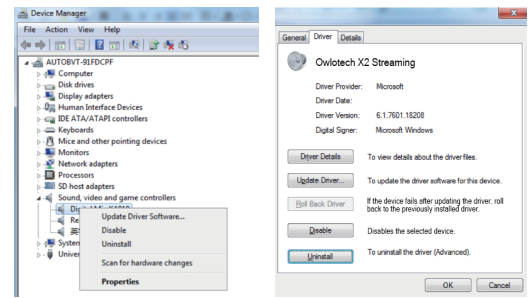
Bad recording Quality

Please don't connect external speakers
(Owlotech does not recommend to use the microphone output to external speakers, which will cause poor recording for interference, and also have probability to damage the hardware)
The microphone should be placed upright, cannot be tilted in order to achieve the best pickup direction

EN

The microphone isn't recognized

When the microphone isn't recognized, the reason is the software problem of PC, please make following steps:

1. Open the device manager of PC; (if you cannot find the device manager, You can find it on Properties)

2. Find the unrecognized microphone under sound, video and game controllers

3. Open the unrecognized microphone properties, and uninstall the driver on driver tab
4. Plug out the microphone and wait for about 10seconds, then connect the PC again to solve this problem.

ES



Cómo girar la rueda central para ajustar el tipo de grabación

Gire la rueda central para cambiar el tipo de grabación

Medio: Mute, Luz LED roja
Del centro a la izquierda: Cardioid, Luz LED verde
Del centro a la derecha: Omnidireccional Luz LED azul

Por favor, tenga en cuenta que la rueda central es sólo para los patrones, no puede ajustar el nivel de salida de volumen o el nivel de sensibilidad.

Opciones de grabación

Para obtener los mejores efectos de captación, seleccione el patrón de grabación adecuado para cada ocasión:

Patrón de grabación	OCASIONES			
Cardioid	STREAMING	PODCASTS	VOZ	INSTRUMENTOS
Omnidireccional	CONFERENCIAS	EVENTOS		

Sensibilidad y volumen de salida

La sensibilidad y el nivel de volumen de salida se pueden ajustar desde el PC, Panel de control> sonido para el dispositivo de Windows
Preferencias del sistema> sonido para el dispositivo Mac

ES

Configuración para el sistema operativo Windows

1. Utilice el cable USB suministrado y conecte el micrófono a un puerto USB de su ordenador directamente;
 2. Abra el panel de control desde el menú de inicio
 3. Seleccione Hardware y Sonido en el panel de control
 4. Seleccione Gestionar dispositivos de audio en el menú Hardware y sonido,
 5. Seleccione la pestaña de grabación, y seleccione el micrófono Owlotech X2 Streaming como dispositivo por defecto
- (Aviso : Abra las propiedades del micrófono Owlotech X2 Streaming en la pestaña de grabación, por favor ajuste el nivel de ganancia en la pestaña de nivel cuando sea necesario).
Seleccione la pestaña Reproducción y establezca el Owlotech X2 Streaming como dispositivo por defecto. A continuación, abra las propiedades y establezca el monitor de grabación de latencia 0 en la pestaña Nivel.

Configuración para Mac OS

1. Abra las preferencias del sistema
2. Seleccione Sonido en las preferencias de sonido
3. Seleccione el micrófono Owlotech X2 Streaming en la pestaña de entrada
4. Ajustar el nivel de ganancia desde el MAC
5. Seleccione el micrófono Owlotech X2 Streaming como dispositivo de salida por defecto

FAQ

El micrófono no funciona

1. Por favor, utilice el cable proporcionado u otro cable de alta calidad para conectar (un cable inferior afectará al rendimiento, y el micrófono no funcionará en el peor de los casos);
2. Por favor, asegúrese de que el enchufe del cable está completamente insertado en el micrófono;
- 3). Asegúrese de que el micrófono es el dispositivo de grabación predeterminado

Mala calidad de grabación

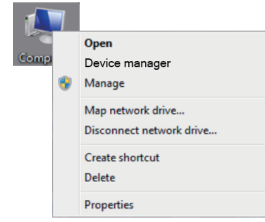
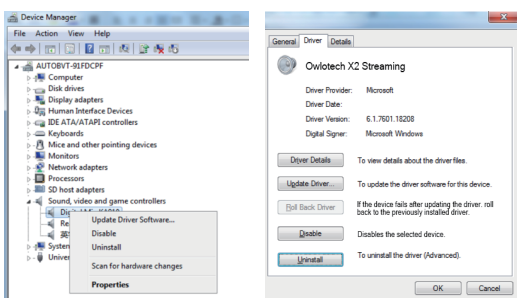
Por favor no conectar altavoces externos.

Owlotech no recomienda usar el micrófono con altavoces externos debido a que puede provocar interferencias y causar daño en el micrófono.

ES

Micrófono no reconocido

Cuando el micrófono no es reconocido, la razón puede ser debido a un problema en el software del PC,

1. Abra el administrador de dispositivos del PC;(si no encuentra el administrador de dispositivos, puede encontrarlo en Propiedades)

2. Busque el micrófono no reconocido en sonido, vídeo y controladores de juegos

3. Abra las propiedades del micrófono no reconocido y desinstale el controlador en la pestaña de controladores
4. Desconecte el micrófono y espere unos 10 segundos, luego conecte el PC de nuevo para resolver este problema.